
Parts list

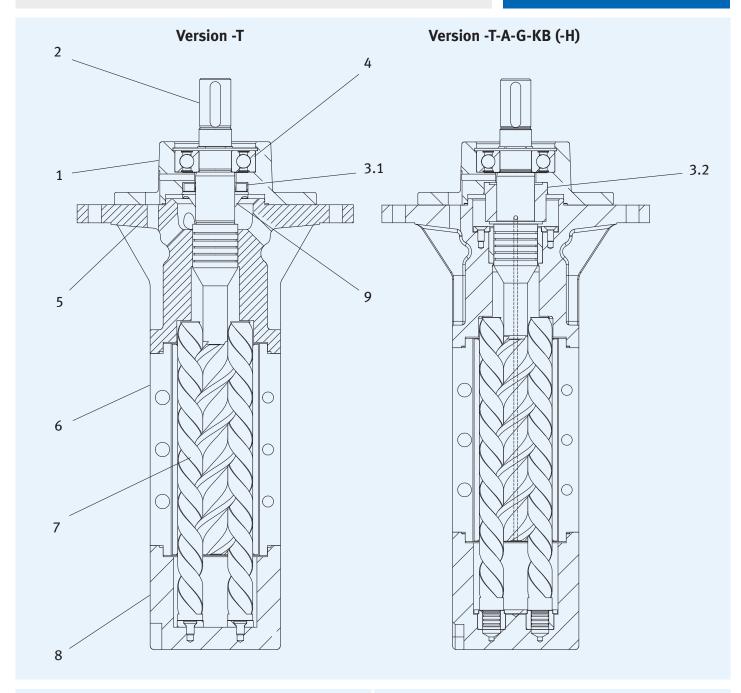

Position	Description	Position	Description
1	Bearing cover	6	Spindle housing
2	Drive spindle	7	Running spindle
3.1	Radial shaft sealing ring (only for version -T)	8	Suction housing
3.2	Mechanical seal (only for version -T-G)	9	Centrifuge ring
4	Deep groove ball bearing		
5	Pressure port housing		